



BAIT CASTING REEL

Titanclaw

TC300/TC300H

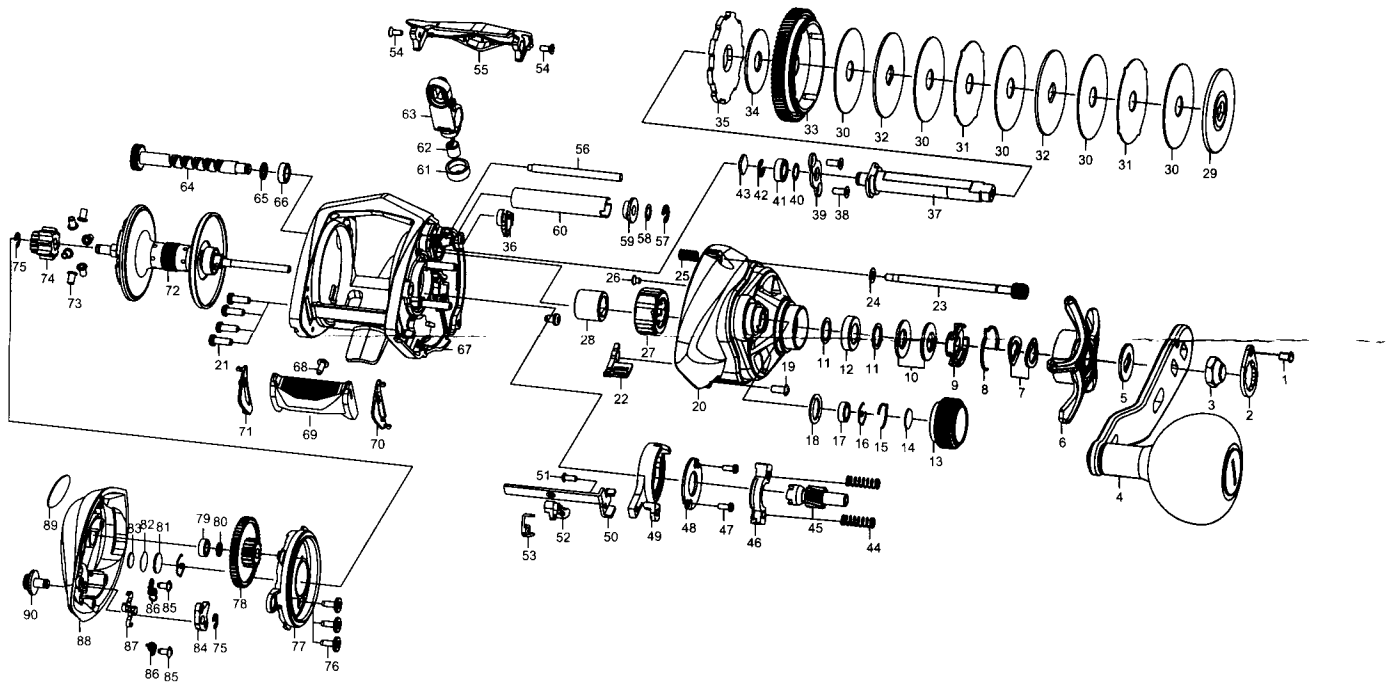

Key	Parts No.	Parts name	Key	Parts No.	Parts name
1	2E2-016-01	A26M-040 SCREW	48	2F8-159-01	CLUTCH CAM RETAINER
2	2F6-043-01	HOLDING PLATE	49	2A2-138-02	CLUTCH CAM
3	2E3-075-01	NUT	50	2F6-151-01	CLUTCH PAWL
4	2YH-604-03	HANDLE TOTAL ASSEMBLY	51	2E2-099-01	B20M-050 SCREW
5	2W2-044-01	KEY WASHER	52	2A4-109-01	CLUTCH PAWL
6	2YD-145-05	STAR DRAG LEVER ASSY	53	2Q3-139-01	CLUTCH PAWL SPRING
7	2L1-025-01	SPRING WASHER	54	2E2-030-02	F20M-050 SCREW
8	2L3-058-01	CLICK LEAF SPRING	55	2F5-600-02	FRONT SUPPORT
9	2F8-147-01	CLICK LEAF SPRING HOLDER	56	2P4-006-02	STABILIZER BAR
10	2L1-013-02	SPRING WASHER	57	2E5-013-01	E3.0 RETAINER
11	2W1-035-06	080-105 WASHER	58	2W1-060-01	041-065 WASHER
12	2Z1-004-05	814-3.5 BALL BEARING	59	2C2-132-01	WORM SHAFT BUSHING
13	2E3-104-04	CAST CONTROL CAP	60	2C4-032-01	LEVEL WIND GUARD
14	2W5-079-04	CAST CONTROL SPACER	61	2E3-099-01	LINE GUIDE NUT
15	2L3-061-01	CLICK LEAF SPRING	62	2M5-010-02	LINE GUIDE PAWL
16	2E4-019-01	BEARING RETAINER	63	2YR-078-01	LINE GUIDE ASSEMBLY
17	2Z1-001-05	508-2.5 BALL BEARING	64	2YM-128-01	WORM SHAFT ASSEMBLY
18	2E9-062-01	O RING	65	2W1-046-01	051-068 WASHER
19	2E2-040-01	b26M-060 SCREW	66	2Z1-001-05	508-2.5 BALL BEARING
20	2YC-133-07	BODY COVER ASSEMBLY	67	2YB-304-04	BODY ASSEMBLY
21	2E2-031-01	A26M-075 SCREW	68	2E1-073-01	B20-060 SCREW
22	2F5-605-01	MAINTENANCE PORT COVER	69	2S3-042-01	CASTING BUTTON
23	2E0-069-02	SIDE COVER SCREW	70	2C4-034-01	CASTING BAR GUIDE B
24	2W1-072-01	031-060 WASHER	71	2C4-033-01	CASTING BAR GUIDE A
25	2Q1-147-01	YOKE SPRING	72	2YS-301-02	SPOOL ASSEMBLY
26	2E2-103-01	F20M-030 SCREW	73	2C2-107-01	BRAKE COLLAR
27	2YZ-013-01	ONE-WAY CLUTCH BEARING ASSEMBLY	74	2F3-041-01	CLICK GEAR
28	2A4-026-01	ONE-WAY CLUTCH INNER TUBE	75	2E5-006-01	E2.5 RETAINER
29	2W2-054-01	KEY WASHER	76	2E1-083-01	X60-040 SCREW
30	2W1-296-01	082-345 WASHER	77	2YF-217-01	CENTRIFUGAL DRAG SET ASSEMBLY
31	2W3-044-01	EARED WASHER	78	2G3-015-01	IDLE GEAR
32	2W2-096-01	KEY WASHER	79	2Z1-012-05	407-2.5 BALL BEARING
33	2G1-193-01	DRIVE GEAR	80	2W4-010-02	SPACER
34	2W1-090-03	082-260 WASHER	81	2W5-078-01	SPACER
35	2A3-051-01	RATCHET	82	2W5-079-01	SPACER
36	2YA-045-01	ANTI-REVERSE PAWL ASSEMBLY	83	2W5-026-01	SPACER
37	2M3-202-01	DRIVE SHAFT	84	2F4-027-01	CLICK PAWL
38	2E2-009-02	F23M-060 SCREW	85	2E1-075-01	B22-045 SCREW
39	2F6-149-01	DRIVE SHAFT RETAINER	86	2Q2-028-01	SPRING
40	2W1-046-04	051-068 WASHER	87	2L5-031-01	CLICK PLATE
41	2Z1-017-05	509-3 BALL BEARING	88	2F5-601-03	PALM SIDE COVER
42	2E5-013-01	E3.0 RETAINER	89	2N2-048-01	NAME PLATE
43	2W5-089-01	SPACER	90	2F7-015-02	CLICK SWITCH
44	2Q1-099-01	YOKE SPRING			
45	2G2-214-01	PINION GEAR	TC300H	SPECIAL PARTS	
46	2A2-140-01	PINION YOKE	20	2YC-133-08	BODY COVER ASSEMBLY
47	2E2-044-01	A20M-050 SCREW	33	2G1-194-01	DRIVE GEAR
			45	2G2-216-01	PINION GEAR

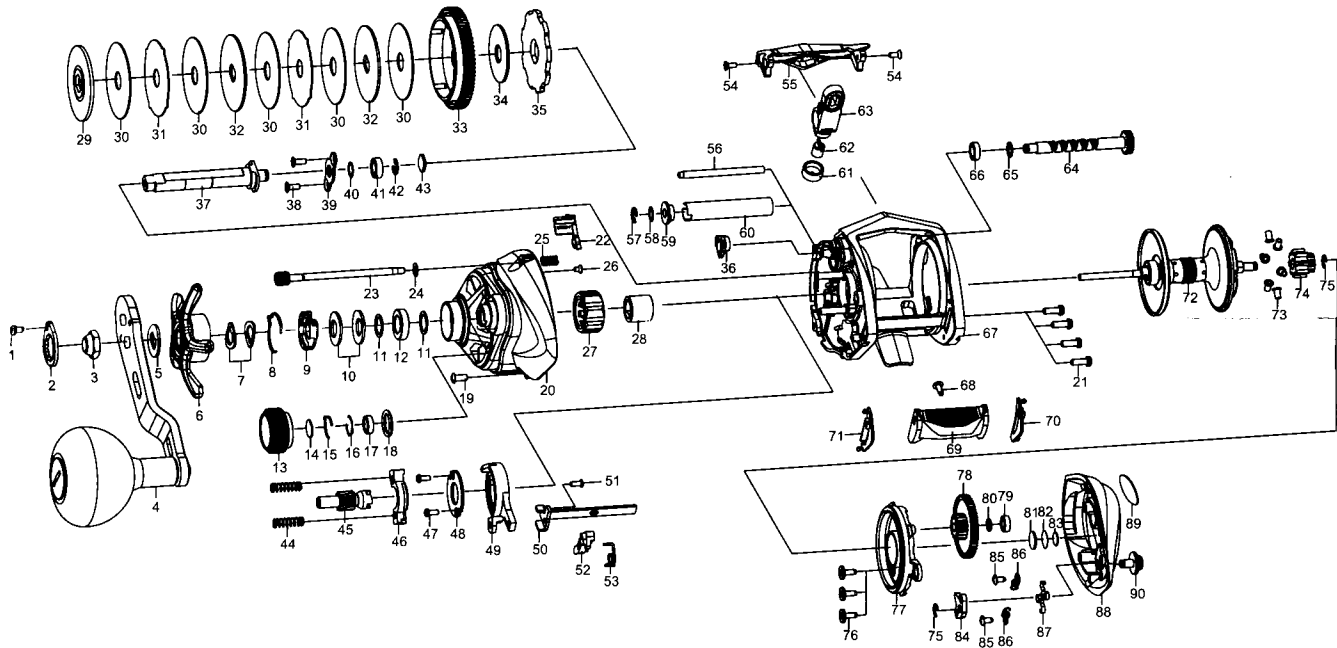

Key	Parts No.	Parts name
1	2E2-016-01	A26M-040 SCREW
2	2F6-043-01	HOLDING PLATE
3	2E3-075-02	NUT
4	2YH-614-03	HANDLE TOTAL ASSEMBLY
5	2W2-044-01	KEY WASHER
6	2YD-139-04	STAR DRAG LEVER ASSY
7	2L1-025-01	SPRING WASHER
8	2L3-058-01	CLICK LEAF SPRING
9	2F8-147-01	CLICK LEAF SPRING HOLDER
10	2L1-013-02	SPRING WASHER
11	2W1-035-06	080-105 WASHER
12	2Z1-004-05	814-3.5 BALL BEARING
13	2E3-104-04	CAST CONTROL CAP
14	2W5-079-04	CAST CONTROL SPACER
15	2L3-061-01	CLICK LEAF SPRING
16	2E4-019-01	BEARING RETAINER
17	2Z1-001-05	508-2.5 BALL BEARING
18	2E9-062-01	O RING
19	2E2-040-01	b26M-060 SCREW
20	2YC-134-05	BODY COVER ASSEMBLY
21	2E2-031-01	A26M-075 SCREW
22	2F5-605-01	MAINTENANCE PORT COVER
23	2E0-069-02	SIDE COVER SCREW
24	2W1-072-01	031-060 WASHER
25	2Q1-147-01	YOKE SPRING
26	2E2-103-01	F20M-030 SCREW
27	2YZ-013-01	ONE-WAY CLUTCH BEARING ASSEMBLY
28	2A4-026-01	ONE-WAY CLUTCH INNER TUBE
29	2W2-054-01	KEY WASHER
30	2W1-296-01	082-345 WASHER
31	2W3-044-01	EARED WASHER
32	2W2-096-01	KEY WASHER
33	2G1-195-01	DRIVE GEAR
34	2W1-090-03	082-260 WASHER
35	2A3-051-01	RATCHET
36	2YA-045-01	ANTI-REVERSE PAWL ASSEMBLY
37	2M3-202-02	DRIVE SHAFT
38	2E2-009-02	F23M-060 SCREW
39	2F6-149-01	DRIVE SHAFT RETAINER
40	2W1-046-04	051-068 WASHER
41	2Z1-017-05	509-3 BALL BEARING
42	2E5-013-01	E3.0 RETAINER
43	2W5-089-01	SPACER
44	2Q1-099-01	YOKE SPRING
45	2G2-215-01	PINION GEAR
46	2A2-137-01	PINION YOKE
47	2E2-044-01	A20M-050 SCREW

Key	Parts No.	Parts name
48	2F8-159-01	CLUTCH CAM RETAINER
49	2A2-136-02	CLUTCH CAM
50	2F6-159-01	CLUTCH PAWL
51	2E2-099-01	B20M-050 SCREW
52	2A4-110-01	CLUTCH PAWL
53	2Q3-138-01	CLUTCH PAWL SPRING
54	2E2-030-02	F20M-050 SCREW
55	2F5-600-02	FRONT SUPPORT
56	2P4-006-02	STABILIZER BAR
57	2E5-013-01	E3.0 RETAINER
58	2W1-060-01	041-065 WASHER
59	2C2-132-01	WORM SHAFT BUSHING
60	2C4-032-01	LEVEL WIND GUARD
61	2E3-099-01	LINE GUIDE NUT
62	2M5-010-02	LINE GUIDE PAWL
63	2YR-078-01	LINE GUIDE ASSEMBLY
64	2YM-128-01	WORM SHAFT ASSEMBLY
65	2W1-046-01	051-068 WASHER
66	2Z1-001-05	508-2.5 BALL BEARING
67	2YB-305-03	BODY ASSEMBLY
68	2E1-073-01	B20-060 SCREW
69	2S3-042-01	CASTING BUTTON
70	2C4-034-01	CASTING BAR GUIDE B
71	2C4-033-01	CASTING BAR GUIDE A
72	2YS-301-02	SPOOL ASSEMBLY
73	2C2-107-01	BRAKE COLLAR
74	2F3-041-01	CLICK GEAR
75	2E5-006-01	E2.5 RETAINER
76	2E1-083-01	X60-040 SCREW
77	2YF-217-01	CENTRIFUGAL DRAG SET ASSEMBLY
78	2G3-015-01	IDLE GEAR
79	2Z1-012-05	407-2.5 BALL BEARING
80	2W4-010-02	SPACER
81	2W5-078-01	SPACER
82	2W5-079-01	SPACER
83	2W5-026-01	SPACER
84	2F4-027-01	CLICK PAWL
85	2E1-075-01	B22-045 SCREW
86	2Q2-028-01	SPRING
87	2L5-031-01	CLICK PLATE
88	2F5-602-03	PALM SIDE COVER
89	2N2-048-01	NAME PLATE
90	2F7-015-02	CLICK SWITCH
TC301H SPECIAL PARTS		
20	2YC-134-06	BODY COVER ASSEMBLY
33	2G1-196-01	DRIVE GEAR
45	2G2-217-01	PINION GEAR